




Samsung WB850F Lens Assembly Replacement

This guide will help to replace Samsung WB850F camera lens assembly.

Written By: Jousling Vazquez

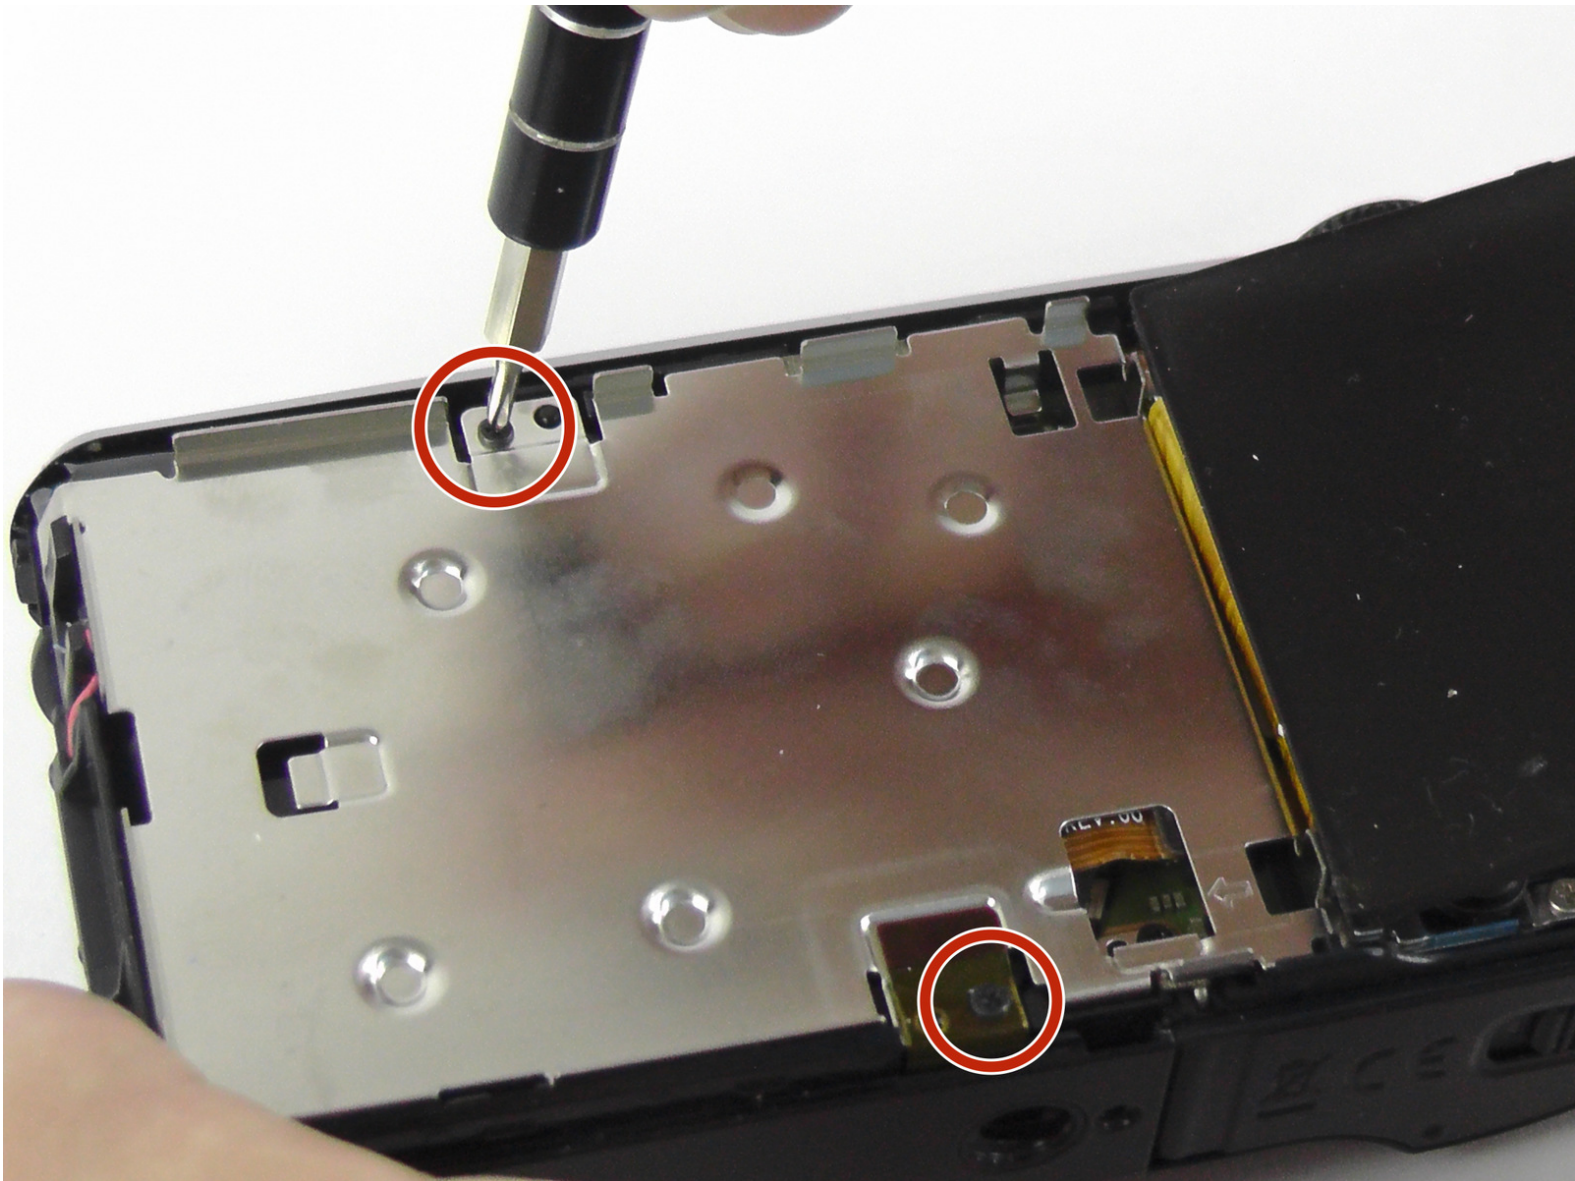



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Control Panel



- Use the Phillips #0 screwdriver to remove the six outside screws. Orientation is from the front of the camera.
- 2 screws are located on the bottom.
- 2 screws are located on the left side. (HDMI port)
- 2 screws are located on the right side of the camera. (Opposite HDMI side)

Step 2






- To remove the back screen case, use the blue opening tool to open the case up from the right side.

Step 3





- Use screwdriver to remove control panel screw.
- Lift up control panel from the side where the screw was just removed.

Step 4 — Lens Assembly

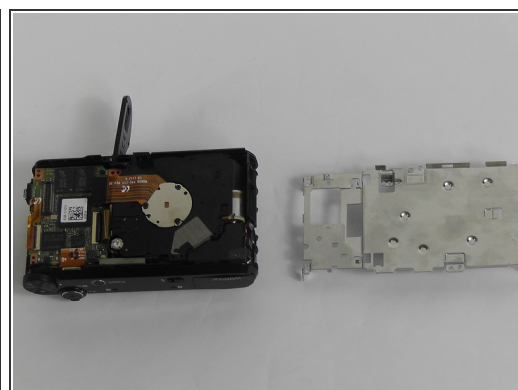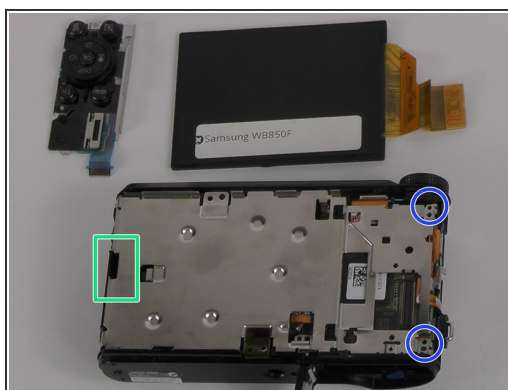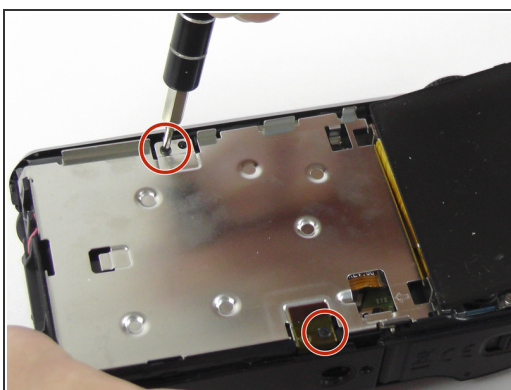


- Remove the two screws.
- Remove the two screws.
- Gently pry open metal case using Plastic tool openers.

Step 5

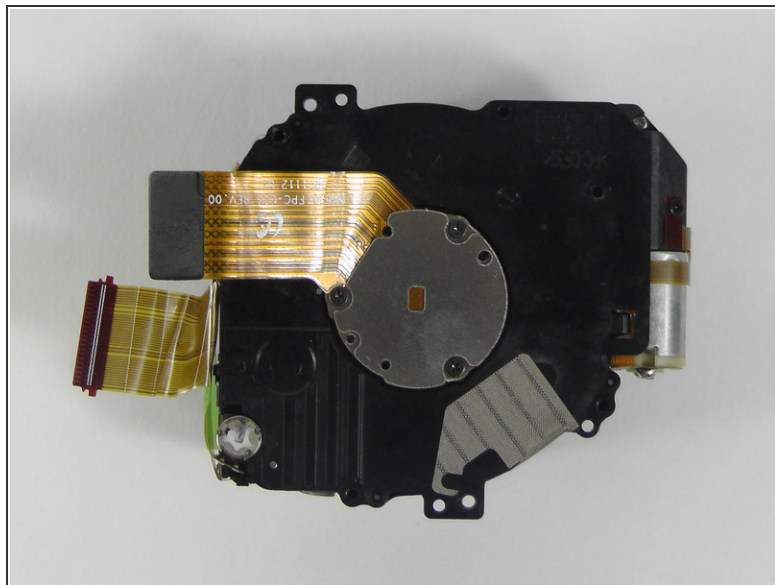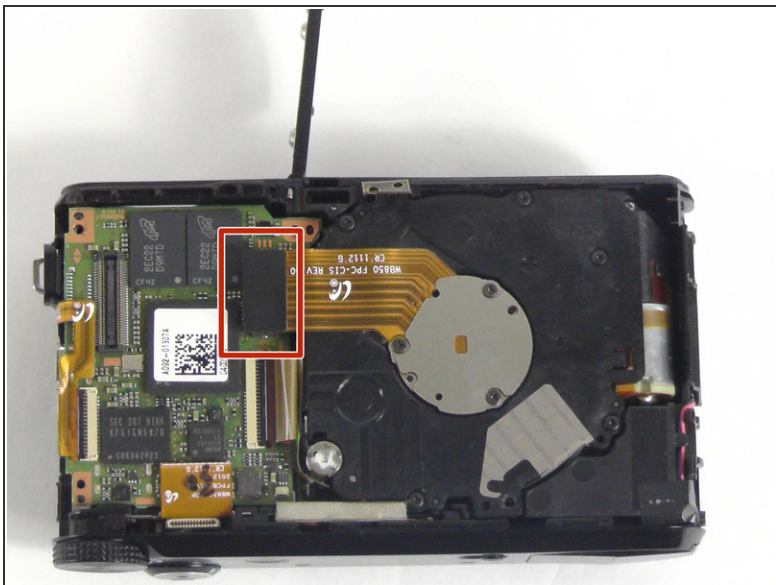

- Gently pull up on the lens connector chip to remove the lens.

Step 6

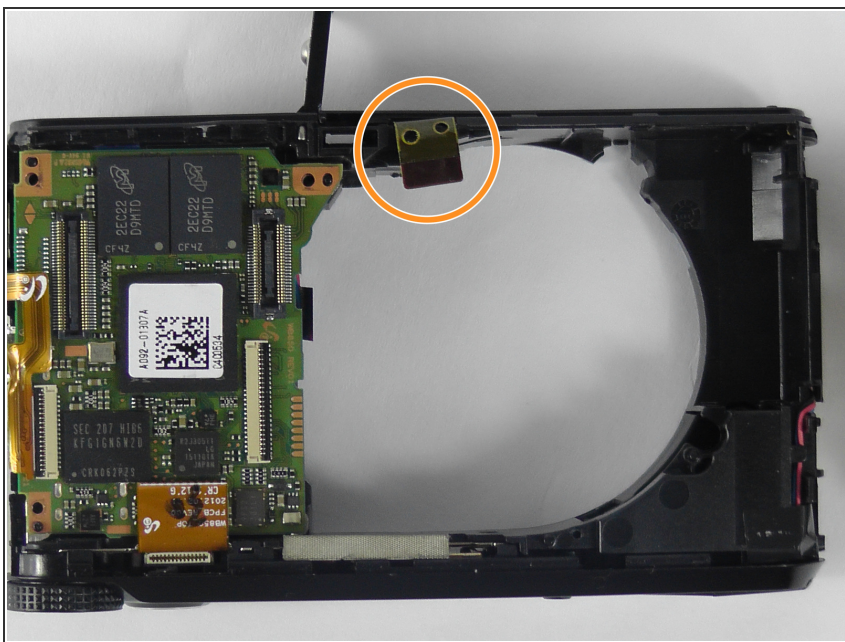

- Insert the new lens to be replaced. Make sure you do not get this tab caught while inserting new lens.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 05:45:54 AM.

